

## ROLLER BLIND ROLLITE

### 1. Measuring

Measure the width and height of the sight opening in the window wing as follows:

#### w .... (width)

Measure from the left-hand to the right-hand top of the glazing rail, at the top where the blind is fixed. In windows with a perpendicular glazing rail the blind width equals to the glass width, incl. the appropriate rubber or silicon sealing. In case of offset or other shaped glazing rails, you have to consult the measuring with the manufacturer.


We manufacture the "ROLLITE" blind with **millimetre** accuracy, in widths from **300 mm** to **1900 mm**.

**Dimensions outside the given limits have to be consulted with the manufacturer.**

#### h .... (height)

Measure similarly to the width, from the top end of the glazing rail to the bottom end of the glazing rail; indicate the value in the order form for the Rollite blind. We manufacture the "ROLLITE" blind height with **millimetre** accuracy, in heights from **300 mm** to **1700 mm**.

**Dimensions outside the given limits also have to be consulted with the manufacturer.**

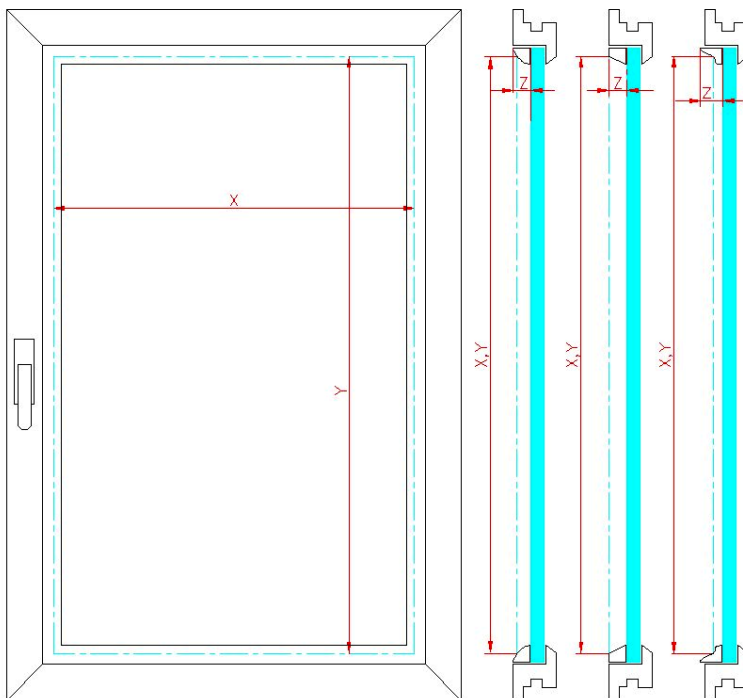

**Colour.....** All RAL shades indicated for the given product in the catalogue and order form. Cloths according to the current ISOTRA s.r.o sampler.

**Orders:** A binding order for blinds for the customer (assembler) must be placed in written form exclusively, alternatively by fax or e-mail, and must contain the company's name, Id. No., Tax Id. No., signature, stamp and contact telephone. We do not reimburse expenses resulting from wrong order of goods or incorrect check at the goods acceptance. We do not provide guarantee for damage resulting from incorrect installation by third assembling firms.

## 2. Installation

Perform the installation strictly according to these instructions to prevent unnecessary assembly faults or other corresponding inconveniences.

### Installation aids:


- drilling machine
- knife, shears

	To mount the side rail P+L	To fix the head rail	To fix the chain holder
screw	3 x 12	3 x 20	3.9 x 16
drill Ø	2 mm	-----	3 mm

### Check:


- Before installation we recommend you to check all parts at the goods delivery to avoid possible problems. Please notify the manufacturer in case of any possible defects or remarks regarding the blind or its installation.

### Installation of the Rollite blind without brake:

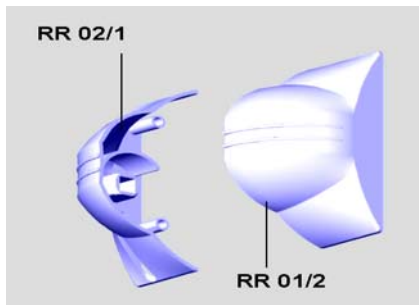


Remove the end caps RR 02/1 and RR 01/2 (for left control) of the blind by means of a straight screwdriver.

Be careful, as you release the winding roller RR15 with the cloth, therefore it is better to fix it with fingers against falling down. Place the blind to the window wing, checking its corresponding width. Check whether the control is located on the correct side, we recommend you to mark the screw positions on the window wing glazing rails through the holes in both side rails, take heed to the blind's horizontal position! We recommend you to check the number and type of the screws delivered and prebore four holes for fixing the blind with a thin drill.


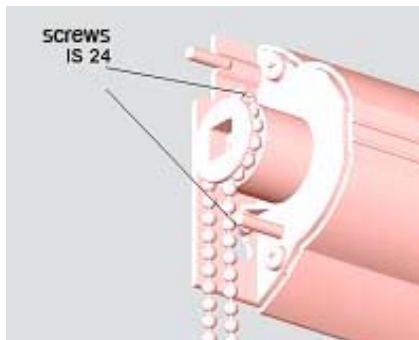


By means of two IS 24 screws attach the blind to the glazing rail on the left as well as right-hand side. In case of offset or other shaped glazing rails, you have to pad out the blind and the guide rails with shims (not included in the delivery). The left-hand figure shows the upper fixing of the end caps to the window wing glazing rail by means of screws. The lower figure shows fixing of the blind to the glazing rail in top view. Pay enhanced attention when choosing the screw lengths for various glazing rail depths (as a standard, the 3 x 12 mm screw is supplied). Otherwise the screw may contact and impair the vacuum double glazing. If screws cannot be used for fixing the blind, back the


upper part of the RR 07 head rail with two-sided adhesive tape across its entire width, as well as the lower surfaces of the both side slats, and stick the blind on the cleaned and degreased window.

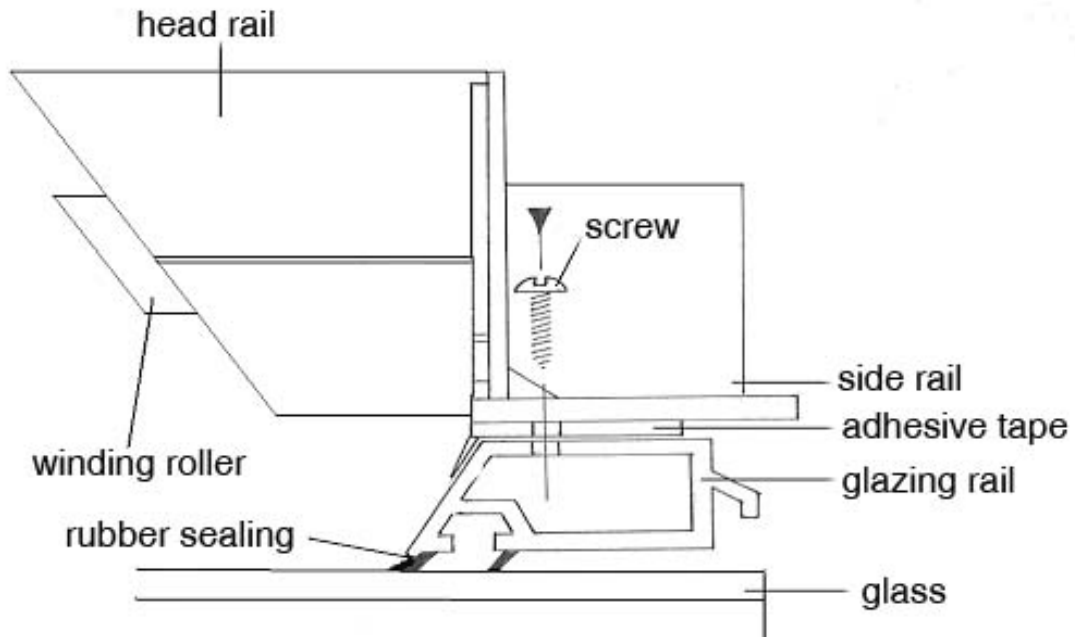

Mount the side cover on the opposite side to the control. Fix the blind side cover (see the figure below) on the control side so that the protruding square of the side cover matches the recess in the roller pin.

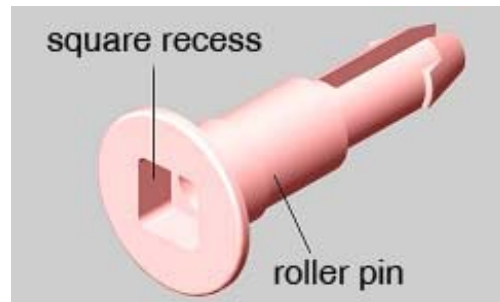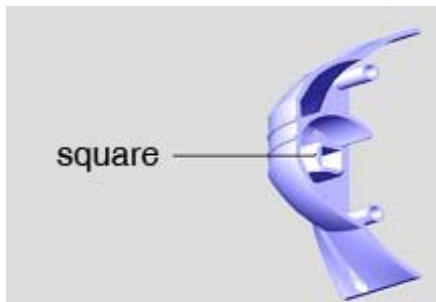

Check the correct length of the guide rails, remove the protective strip from the two-sided adhesive tape and stick the guide rails onto the glazing rails according to the lower figure.

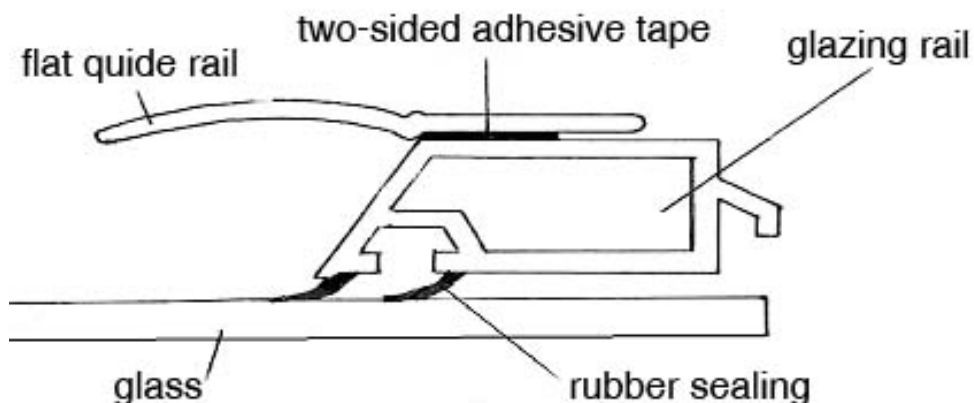

Adjust the lower stop as follows: let down the blind to its lower position and mount the IS 28 connector on the chain so that it touches the upper side cover and click to fasten it. Screw on the chain holder.



Check the blind functionality repeatedly.


### **Installation of the Rollite blind with brake:**

The installation of the blind with brake is completely identical, except that the chain control of the blind requires an enhanced force and it does not move down by itself after the side cover is put on at the control side.

So, actually, the chain holder just prevents the chain from moving when opening or closing the window wing.

### **Caution:**

In order to open the window by 90°, the minimum distance between the window frame and the window lining must be 4 cm.

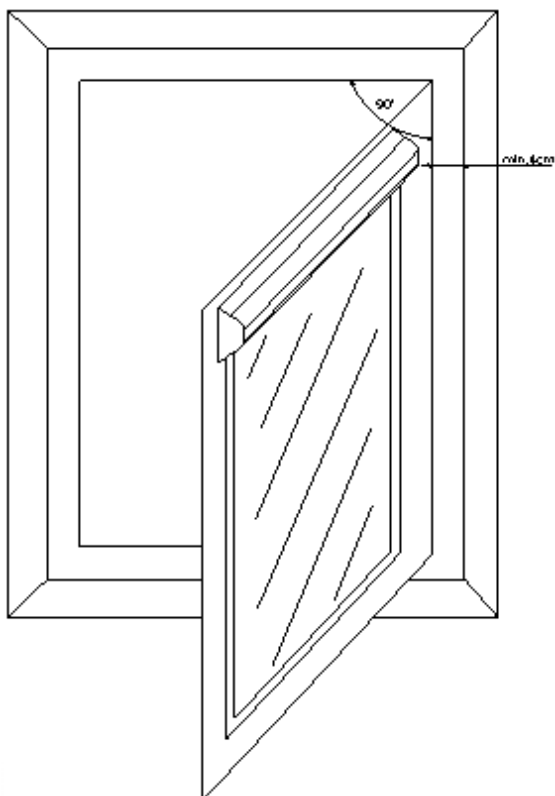

The measuring and installation instructions are valid from 4.1.2006.  
Measuring and installation instructions issued before this date abate.